

## 8 notes



1. Using Golf•Launchpad while any of its parts are incorrectly installed, loose or worn-out can cause premature failure of the unit. Worse, loose or damaged parts can come off during play, causing injury or property damage. Replacement parts can be purchased from [www.electricspin.com](http://www.electricspin.com).

2. For best accuracy, keep your clubs clean and periodically vacuum debris off the turf. Do not insert anything in the sensor holes – vacuuming lightly over the turf should pick up any dust off the sensors.

3. For maximum simulation accuracy, use the correct activation mode of Launchpad (pg. 4). For drives and long pitches activate Launchpad with the L or R sensors. For the short game and putting, activate Launchpad with the P sensor. The shot type selected in the game should match the mode in which Launchpad is activated. Enable Tiger Proofing to increase the game's realism.

### DO

- To avoid unintentional sidespin, swing straight over the sensors, and set the shot direction using the gamepad
- Activate Launchpad using the correct shot mode depending on the shot you are playing
- Above all, enjoy the game!

## Using Launchpad with *Tiger '05 and previous, Tiger '06, Tiger '07, and Hot Shots Golf Fore!*

Golf•Launchpad is factory-configured to be compatible with Tiger Woods 2006. To change the default mode,

1. Disconnect Golf Launchpad from the PlayStation2 and move the ball and tee away from the sensor grid

2. Cover only the indicated sensors (with any reflective object):

P & U for *Tiger Woods 2003-2005 and 2007*

P & R for *Tiger Woods 2006*

P & L for *Hot Shots Golf Fore!*

3. Power up Golf Launchpad by connecting to the PlayStation2

4. The status light will blink and then turn solid green or flash red indicating that the selected mode has been stored.

The chosen mode will be saved until it is changed again.

